

cnMatrix Telnet Client Parameters and Commands

Commands	Description	Mode
<pre>telnet <ipv4_addr/ipv6_addr> [-l <username>]</pre> <p>Available options:</p> <ul style="list-style-type: none">• <ipv4_addr/ipv6_addr> - Establishes telnet client session for the specified IP address. It supports both IPv4 and IPv6 addresses.• -l <username> - Specifies the user name.	This command establishes telnet client session with the specified IP address.	Privileged EXEC
<pre>show telnet-client</pre>	Displays the status of Telnet Client feature and the number of active client sessions.	Privileged EXEC