

cnMatrix OOB Parameters and Commands

Commands	Description	CLI Mode
<code>show interface mgmt0</code>	Displays interface status and configuration.	Privileged EXEC
<code>show ip interface mgmt0</code>	Displays IP interface status and configuration.	Privileged EXEC
<code>shutdown</code>	Disables a physical interface.	Interface Configuration
<code>no shutdown</code>	Enables a physical interface.	Interface Configuration
<code>ip address dhcp</code>	IP Address negotiated via DHCP.	Interface Configuration
<code>no ip address</code>	Resets the IP address for this OOB Interface.	Interface Configuration
<code>ip address <IP address> <IP mask></code>	Configures a static IP address on the OOB Interface.	Interface Configuration