

# cnMatrix Port Settings Features Parameters and Commands

## **Negotiation**


Commands	Description	CLI Mode
negotiation	Enables auto-negotiation on the interface.	Interface Configuration (Physical Interface)
no negotiation	Disables auto-negotiation on the interface.	Interface Configuration (Physical Interface)

### **Speed**

Commands	Description	CLI Mode
speed { 10   100   1000   10000   10000   auto   nonegotiate}  Available options:  10 - Port runs at 10Mbps.  100 - Port runs at 100Mbps.  1000 - Port runs at 1000Mbps.  10000 - Port runs at 1000Mbps.  10000 - Port runs at 1000Mbps.  auto - Port automatically configures it's speed based on the peer switch.  nonegotiate - Disables negotiation on the ports.	Sets the speed of the interface.	Interface Configuration (Physical Interface)

## **Duplex**

Commands	Description	CLI Mode
<pre>duplex { full   half  auto} Available options:</pre>	Configures the duplex operation.	Interface Configuration (Physical Interface)
<ul> <li>full - Port is in full-duplex mode, that is data simultaneously communicates in both directions.</li> <li>half - Port is in half-duplex mode, that is data can communicate in both directions, but only in one direction at a time.</li> <li>auto - Port is in auto mode.</li> </ul>		

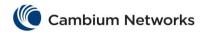

#### **MTU**

Commands	Description	CLI Mode
mtu <frame-size(46-9216)></frame-size(46-9216)>	Configures the maximum transmission unit frame size for all the frames transmitted and received on all the interfaces in a switch.	Interface Configuration (Physical Interface)