

cnMatrix USB Parameters and Commands

Commands	Description	CLI Mode
<code>mount usb</code>	Performs USB mount.	Global Configuration
<code>unmount usb</code>	Performs USB unmount.	Global Configuration
<code>show usb files</code>	Displays the files that are currently available on the USB stick.	Privileged EXEC
<code>show usb tree</code>	Displays the files that are on the device in a tree structure.	Privileged EXEC
<code>show usb info</code>	Displays USB device and vendor information.	Privileged EXEC
<code>download agent usb:<agent_name></code> Available options: <ul style="list-style-type: none"> • <code><agent_name></code>- The image name present on the USB device 	Downloads the new agent. Note: While downloading the new agent, the CLI interface will be blocked.	Privileged EXEC
<code>copy startup-config usb:<config_file></code> Available options: <ul style="list-style-type: none"> • <code><config_file></code> - Name of the file to which the startup config file will be copied 	Enables you to copy a startup config file to the flash device.	Privileged EXEC
<code>copy usb:<config_file> startup-config</code> <ul style="list-style-type: none"> • <code><config_file></code> - File on the USB device to be copied into configuration file 	Applies a startup config file from a flash device.	Privileged EXEC
<code>write usb:<filename></code>	Specifies the destination path on the USB device to copy running config.	Privileged EXEC